



**M&H** ELECTRIC  
FABRICATORS, INC.

13537 Alondra Blvd. Santa Fe Springs CA 90670  
Phone (562) 928-6552 Fax (562) 928-6672

INSTRUCTION SET 92963720 # 35822 REV 1.1 8/1/95

©2001  
M&H Electric Fabricators, Inc.  
All rights reserved

The design and documents included in this assembly are the exclusive property of M&H Electric Fabricators, Inc. No part of the M&H design or documentation may be reproduced without the express permission of M&H Electric Fabricators, Inc.

**92963720**

# WIRE USAGE CHART

92963720

<u>WIRE</u>	<u>WIRE COLOR</u>	<u>GA.</u>	<u>CIRCUIT DESCRIPTION</u>
1 a	dk green	18	Coil "+" terminal to ignition switch
1 b	dk green	18	Ignition switch to ballast resistor
2	black	10	Starter "BAT" terminal to ignition switch "BAT" terminal
3	dk blue	12	Neutral safety switch to ignition switch "SOL" terminal
4 a	brown	18	Ignition switch to ballast resistor
4 b	brown	18	Ignition switch to oil pressure light
5	purple	12	Starter "SOL" terminal to neutral safety switch
6	gray	18	Shift indicator light to "PL" terminal on light switch
7	dk blue	18	Oil pressure sender to oil pressure indicator light