

WIRE USAGE CHART INSTRUCTION SHEET

WIRE #	WIRE COLOR	GAUGE	CIRCUIT DESCRIPTION
1 a	gray	16	DASH LIGHT TO DASHLIGHT IN-LINE POWER SPLICE
1 b	gray	16	DASH LIGHT TO DASHLIGHT IN-LINE POWER SPLICE
1 c	gray	16	DASH LIGHT TO DASHLIGHT IN-LINE POWER SPLICE
1 d	gray	16	DASH LIGHT TO DASHLIGHT IN-LINE POWER SPLICE
1 e	gray	16	HEADLIGHT SWITCH (DASH TERMINAL) TO DASHLIGHT IN-LINE POWER SPLICE
1 f	gray	16	DASH LIGHT TO DASHLIGHT IN-LINE POWER SPLICE
2 a	red	14	IGNITION SWITCH (BAT TERMINAL) TO IN-LINE POWER SPLICE
2 b	red	10	IN-LINE POWER SPLICE TO AMMETER - TERMINAL (PASSENGER SIDE CONNECTION)
2 c	red	12	IN-LINE POWER SPLICE TO HEADLIGHT SWITCH (BAT TERMINAL)
2 d	red	10	IN-LINE POWER SPLICE TO VOLTAGE REGULATOR (B TERMINAL)
3 a	brown	16	HEADLIGHT SWITCH (PARK TERMINAL) TO FUSE BLOCK PARK LIGHT TERMINAL
3 b	brown	16	FUSE BLOCK (PARK LIGHT TERMINAL) TO LEFT PARKING LIGHT
3 c	brown	16	LEFT PARKING LIGHT TO RIGHT PARKING LIGHT
3 d	brown	16	PARKING LIGHT CONNECTOR WIRE
3 е	brown	16	PARKING LIGHT CONNECTOR WIRE
5 a	purple	16	HEADLIGHT SWITCH (TAIL TERMINAL) TO FUSE BLOCK (TAIL TERMINAL)
5 b	purple	16	FUSE BLOCK (TAIL TERMINAL) TO REAR BODY CONNECTOR
5 c	purple	16	REAR BODY CONNECTOR TO TAIL LAMPS
5 d	purple	16	REAR BODY CONNECTOR TO TAIL LAMPS
8 a	orange black	16	HEADLIGHT SWITCH (STOP TERMINAL) TO FUSE BLOCK (STOP TERMINAL)
8 b	orange black	16	FUSE BLOCK (STOP TERMINAL) TO STOP LIGHT SWITCH
11	brown	10	VOLTAGE REGULATOR (GEN TERMINAL) TO GENERATOR (A TERMINAL)
14	yellow	12	HEADLIGHT SWITCH (HEAD TERMINAL) TO DIMMER SWITCH (BAT TERMINAL)
15 a	tan	14	FUSE BLOCK (LOW BEAM TERMINAL) TO DIMMER SWITCH LOW BEAM TERMINAL
15 b	tan	16	FUSE BLOCK (LOW BEAM TERMINAL) TO LEFT HEADLIGHT LOW BEAM
15 c	tan	16	LEFT HEADLIGHT LOW BEAM TO RIGHT HEADLIGHT LOW BEAM
15 d	tan	14	HEADLIGHT LOW BEAM WIRE
15 e	tan	14	HEADLIGHT LOW BEAM WIRE
16 a	It green	16	HEADLIGHT HIGH BEAM INDICATOR LIGHT TO FUSE BLOCK (HIGH BEAM) TERMINAL
16 b	It green	14	FUSE BLOCK (HIGH BEAM TERMINAL) TO DIMMER SWITCH HIGH BEAM TERMINAL
16 c	It green	14	FUSE BLOCK (HIGH BEAM TERMINAL) TO RIGHT HEADLIGHT HIGH BEAM
16 d	It green	14	RIGHT HEADLIGHT HIGH BEAM TO LEFT HEADLIGHT HIGH BEAM
16 e	It green	14	HEADLIGHT HIGH BEAM WIRE
16 f	It green	14	HEADLIGHT HIGH BEAM WIRE
19	pink black	16	IGNITION SWITCH (IGN TERMINAL) TO FUEL GAUGE
22 a	white	16	STOPLIGHT SWITCH TO STOPLIGHTS
22 b	white	16	REAR BODY CONNECTOR TO STOP LAMPS
22 c	white	16	REAR BODY CONNECTOR TO STOP LAMPS
23	black	10	AMMETER + TERMINAL (DRIVER'S SIDE CONNECTION) TO STARTER
24	dk blue	16	VOLTAGE REGULATOR (F TERMINAL) TO GENERATOR (F TERMINAL)
25 a	orange	14	AMMETER GAUGE + TERMINAL TO FUSE BLOCK + HORN CONNECTION

WIRE USAGE CHART INSTRUCTION SHEET

WIRE #	WIRE COLOR	GAUGE	CIRCUIT DESCRIPTION
25 b	orange	14	FUSE BLOCK + HORN CONNECTION TO HORN
26 a	black	16	FUEL GAUGE TO FUEL TANK SENDER CONNECTOR
26 b	black	16	FUEL TANK SENDER CONNECTOR TO FUEL TANK
27 a	black white	14	HORN BUTTON TO FUSE BLOCK - HORN CONNECTION
27 b	black white	14	FUSE BLOCK - HORN CONNECTION TO HORN
29	pink	16	IGNITION SWITCH TO COIL
31 a	yellow	16	DIRECTIONAL SIGNAL SWITCH TO LEFT TAIL DIRECTIONAL LAMP
31 b	yellow	16	REAR BODY CONNECTOR TO LEFT TAIL LAMP
32 a	It blue black	16	DIRECTIONAL SIGNAL SWITCH TO RIGHT TAIL DIRECTIONAL LAMP
32 b	It blue black	16	REAR BODY CONNECTOR TO RIGHT TAIL LAMP
34 a	dk green white	16	DIRECTIONAL SIGNAL SWITCH TO DIRECTIONAL SIGNAL CONNECTOR
34 b	dk green white	16	DIRECTIONAL SIGNAL CONNECTOR TO LEFT FRONT DIRECTIONAL LIGHT CONNECTOR
34 c	dk green white	16	DIRECTIONAL LIGHT CONNECTOR TO LEFT FRONT DIRECTIONAL LIGHT
35 a	dk green	16	DIRECTIONAL SIGNAL SWITCH TO DIRECTIONAL SIGNAL CONNECTOR
35 b	dk green	16	DIRECTIONAL SIGNAL CONNECTOR TO RIGHT FRONT DIRECTIONAL LIGHT CONNECTOR
35 с	dk green	16	DIRECTIONAL LIGHT CONNECTOR TO RIGHT FRONT DIRECTIONAL LIGHT
42	black	16	COIL TO DISTRIBUTOR WIRE
150 a	black	16	HEADLIGHT GROUND WIRE
150 b	black	16	HEADLIGHT GROUND WIRE



INSTRUCTION SHEET
1947-49 CHEVROLET PICKUP

92963464

SHEET 2 OF 2