



M&H ELECTRIC
FABRICATORS, INC.

13537 Alondra Blvd. Santa Fe Springs CA 90670
Phone (562) 928-6562 Fax (562) 928-6572

INSTRUCTION SET 92963717 # 35819 REV 1.1 8/1/95

©2001
M&H Electric Fabricators, Inc.
All rights reserved

The design and documents included in this assembly
are the exclusive property of M&H Electric Fabricators, Inc.
No part of the design or documentation may be reproduced
without the express permission of M&H Electric Fabricators, Inc.

92963717

WIRE USAGE CHART

92963717

<u>WIRE</u>	<u>WIRE COLOR</u>	<u>GA.</u>	<u>CIRCUIT DESCRIPTION</u>
1	black	10	Starter "BAT" terminal to ignition switch "BAT" terminal
2	dk blue	12	Neutral safety switch to ignition switch "SOL" terminal
6	purple	12	Starter "SOL" terminal to neutral safety switch
5a	brown	18	Ignition switch to ballast resistor
5b	brown	18	Ignition switch to oil pressure light
4	dk blue	18	Oil pressure sender to oil pressure indicator light
3a	dk green	18	Coil "+" terminal to ignition switch
3b	dk green	18	Ignition switch to ballast resistor
7	gray	18	Shift indicator light to "PL" terminal on light switch