



M&H ELECTRIC
FABRICATORS, INC.

13637 Alondra Blvd. Santa Fe Springs CA 90670
Phone (562) 928-6662 Fax (562) 928-6672

INSTRUCTION SET 92963731 # 35833 REV 1.1 8/1/95

©2001
M&H Electric Fabricators, Inc.
All rights reserved

The design and documents included in this assembly are the exclusive property of M&H Electric Fabricators, Inc. No part of the M&H design or documentation may be reproduced without the express permission of M&H Electric Fabricators, Inc.

92963731

WIRE USAGE CHART

92963731

<u>WIRE</u>	<u>WIRE COLOR</u>	<u>GA.</u>	<u>CIRCUIT DESCRIPTION</u>
1 B	dk green	18	Coil "+" terminal to ballast resistor
2	black	10	Starter "BAT" terminal to ignition switch "BAT" terminal
3	purple	12	Neutral safety switch to ignition switch "SOL" terminal
4 A	tan	18	Ignition switch to ballast resistor
4 B	tan	18	Ignition switch to oil pressure indicator light
5	purple	12	Starter "SOL" terminal to neutral safety switch
7	dk blue	18	Oil pressure sender to oil pressure indicator light
8	dk green	18	Temperature sender to temperature gauge terminal
1 A	dk green	18	Starter "RES" terminal to ballast resistor