


The design and documents included in this assembly are the exclusive property of M&H Electric Fabricators, Inc. No part of the kit design or documentation may be reproduced without the express permission of M&H Electric Fabricators, Inc.

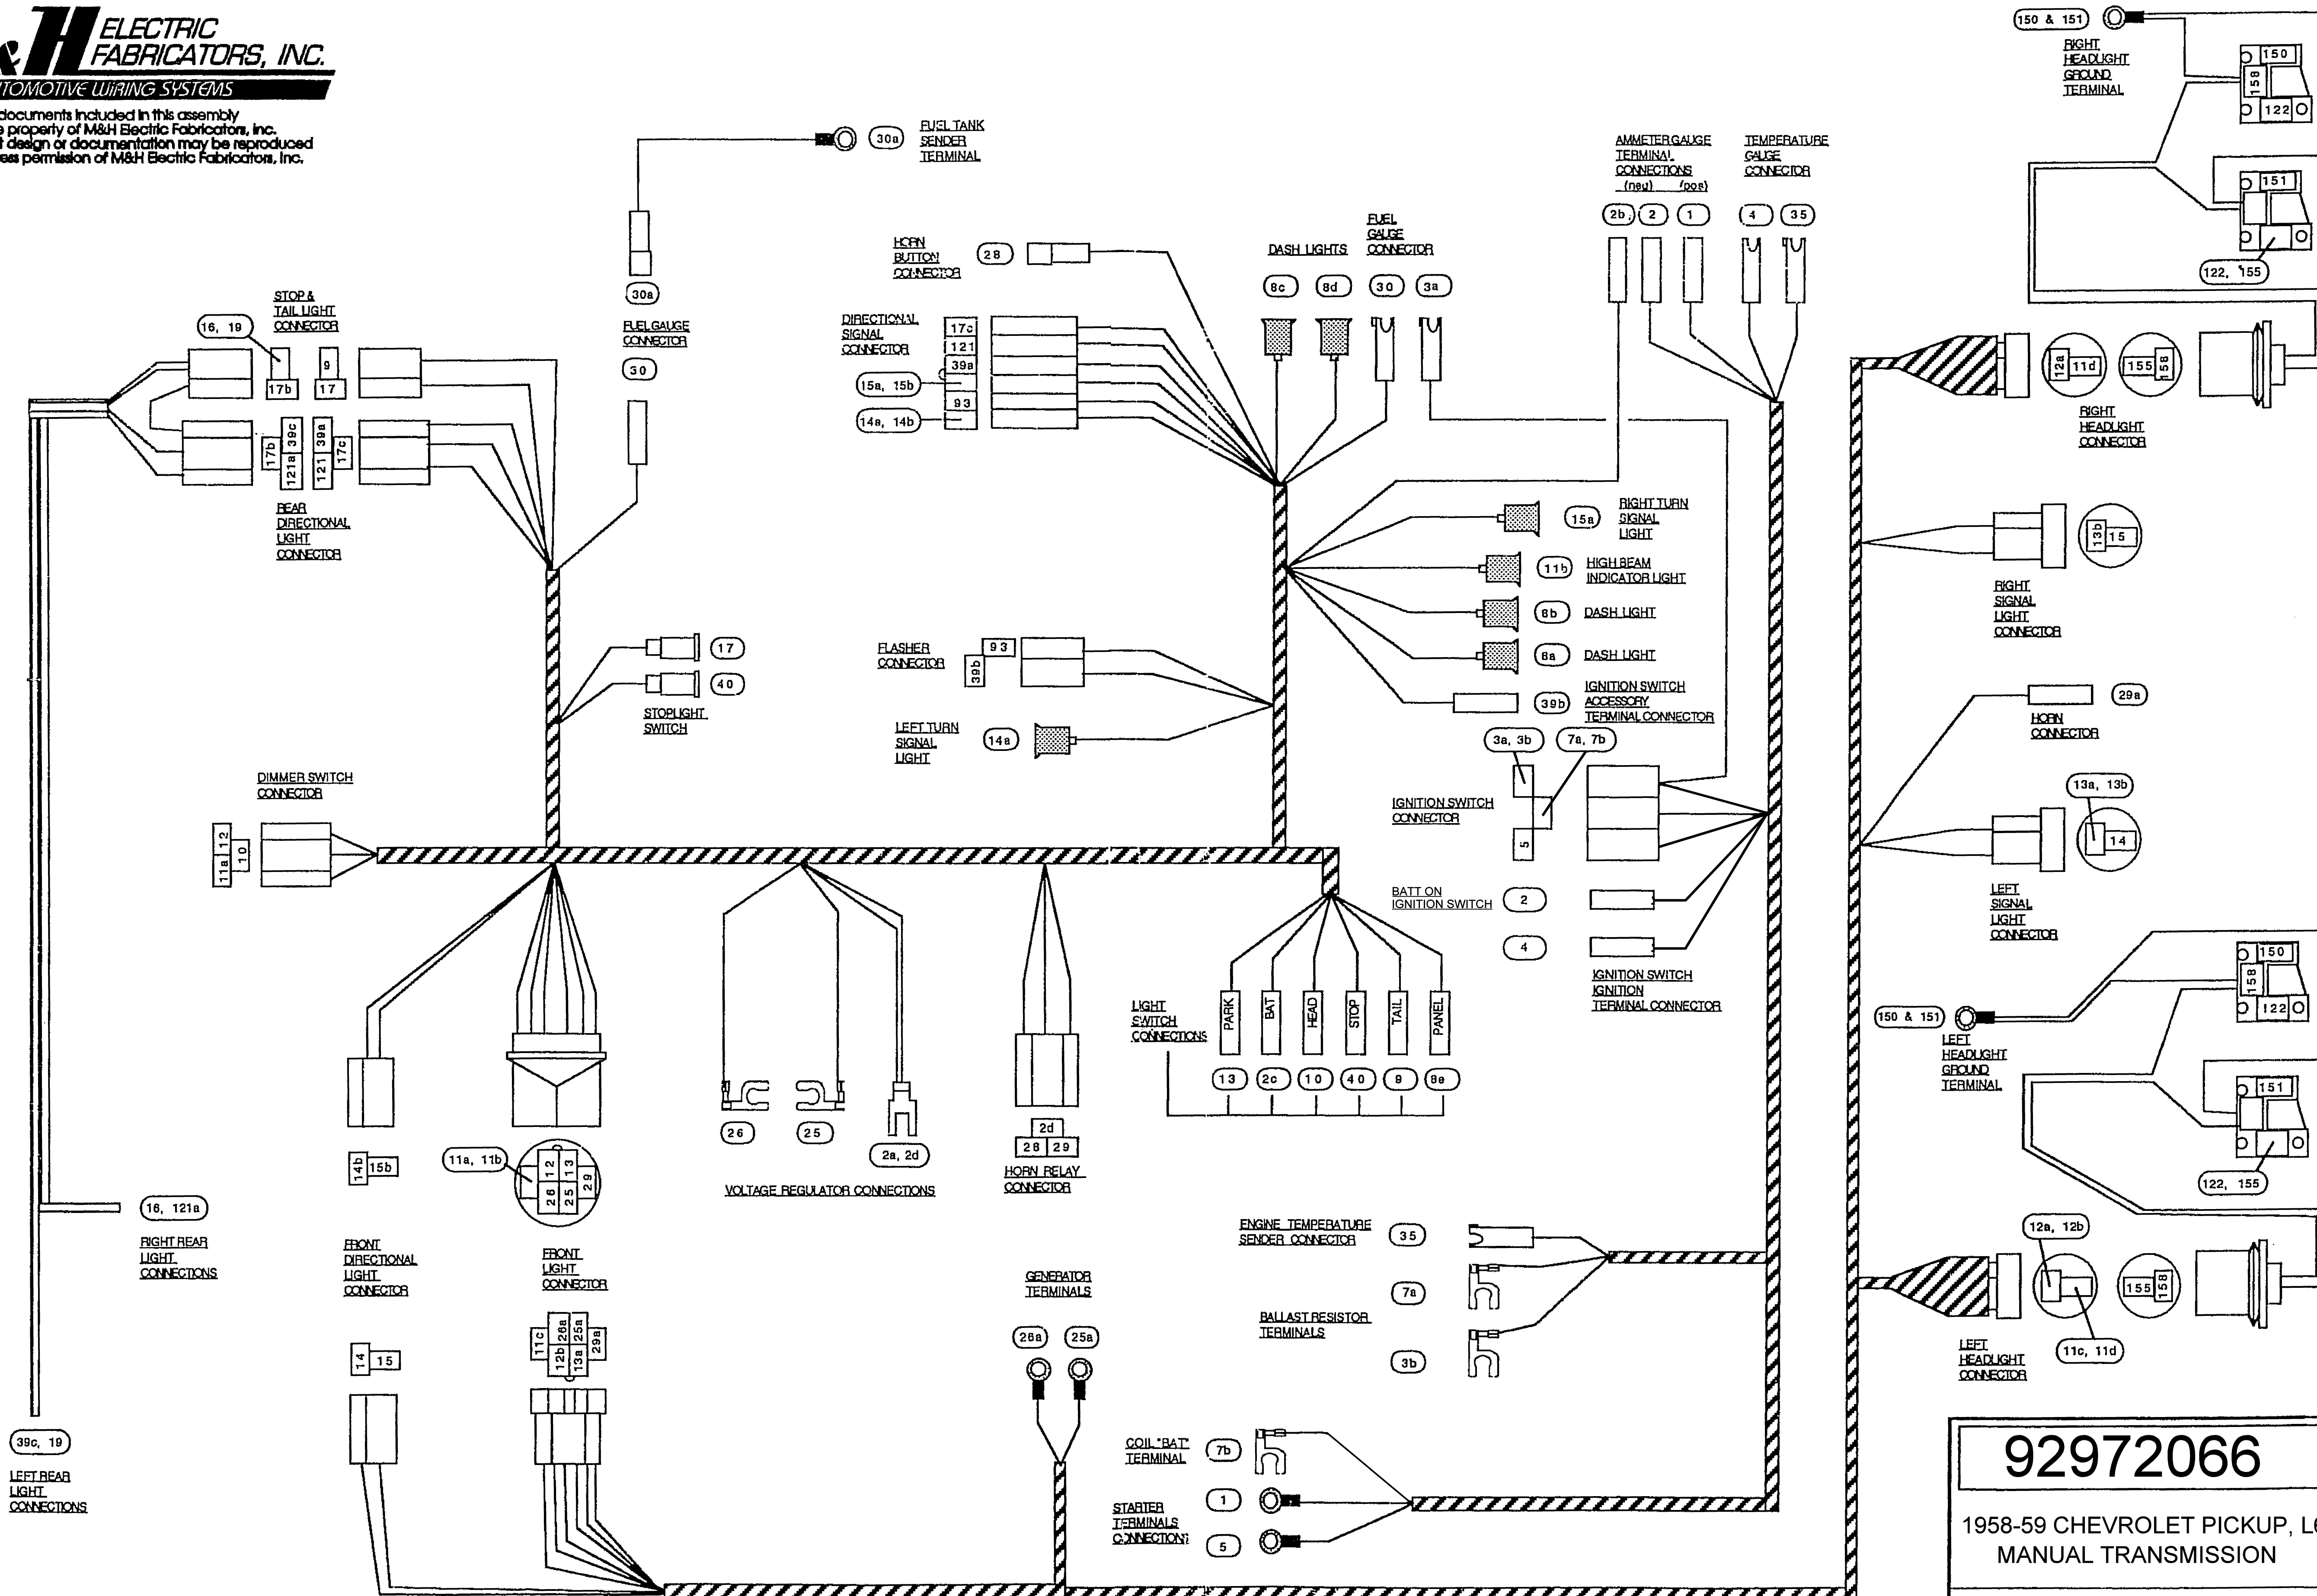

92972066

1958-59 CHEVROLET PICKUP, L6
MANUAL TRANSMISSION

REVISION 1.1 02-27-17
REFERENCE 92963302

WIRE USAGE CHART INSTRUCTION SHEET

92972066

WIRE #	WIRE COLOR	GAUGE	CIRCUIT DESCRIPTION
1	black	12	Starter motor "BAT" terminal to ammeter "+" terminal
2	red	12	Ignition switch "BAT" terminal to ammeter (-) terminal
2 a	red	14	In line splice to voltage regulator "BAT" terminal
2 b	red	14	In line splice to ammeter gauge "-" terminal
2 c	red	14	In line splice to light switch "BAT" terminal
2 d	red	14	Voltage regulator "BAT" terminal to horn relay "BAT" terminal
3 a	brown	18	Ballast resistor to ignition switch "IGN" terminal
3 b	pink	18	Ignition switch "IGN" terminal to fuel gauge "IGN" terminal
4	pink	18	Ignition switch "IGN" terminal to "IGN" on temperature gauge
5	purple	14	Neutral safety switch to ignition switch "SOL" terminal
7 a	dk green	18	Starter motor resistor terminal to ballast resistor
7 b	dk green	18	Coil "BAT" terminal to starter motor resistor terminal
8 a	gray	18	In line splice to instrument panel light
8 b	gray	18	In line splice to instrument panel light
8 c	gray	18	In line splice to instrument panel light
8 d	gray	18	In line splice to instrument panel light
8 e	gray	18	In line splice to light switch "PANEL LIGHT" terminal
9	black	18	Stop & tail light connector to light switch "TAIL" terminal
10	lt blue	18	Dimmer switch "BAT" terminal to light switch "HEADLIGHT" terminal
11 a	lt green	18	Front light connector to dimmer switch "HIGH BEAM" terminal
11 b	lt green	18	Front light connector to high beam indicator light
11 c	lt green	16	Front light connector to left headlamp high beam connection
11 d	lt green	16	Right headlamp high beam connection to left headlamp high beam connection
12	tan	18	Front light connector to dimmer switch "LOW BEAM" terminal
12 a	tan	18	Right headlamp low beam connection to left headlamp low beam connection
12 b	tan	18	Front light connector left headlamp low beam connection
13	purple	18	Front light connector to light switch "PARK" terminal
13 a	purple	18	Front light connector to left parking light connector
13 b	purple	18	Right parking light connector to left parking light connector
14	lt blue	18	Front directional light connector to left signal light connector (directional)
14 a	lt blue	18	Directional signal connector to left turn signal light
14 b	lt blue	18	Directional signal connector to front directional light connector
15	dk blue	18	Front directional light connector to right signal light connector (directional)
15 a	dk blue	18	Directional signal connector to right turn signal light
15 b	dk blue	18	Directional signal connector to front directional light connector
16	dk green	16	Stop & tail light connector to right rear tail light connection
17	white	18	Stop & tail light connector to stop light switch
17 b	lt green	16	Stop & tail light connector to rear directional light connector
17 c	white	18	Directional signal connector to rear directional light connector
19	yellow	16	Stop & tail light connector to left rear tail light connection

WIRE USAGE CHART INSTRUCTION SHEET

92963302

WIRE #	WIRE COLOR	GAUGE	CIRCUIT DESCRIPTION
25	brown	12	Front light connector to voltage regulator "A" terminal
25 a	brown	12	Front light connector to generator "A" terminal
26	dk blue	18	Front light connector to voltage regulator "F" terminal
26 a	dk blue	18	Front light connector to generator "F" terminal
28	tan	18	Horn button connector to horn relay "S" terminal
29	black	14	Front light connector to horn relay "H" terminal
29 a	black	14	Front light connector to horn connector
30	brown	18	Gas tank sending unit connector to gas gauge
30 a	brown	18	Gas tank sending unit to gas tank sending unit
35	dk green	16	Temperature gauge sending unit to temperature gauge "SENDER" terminal
39 a	pink	18	Directional signal connector to rear directional light connector
39 b	pink	18	Ignition switch accessory terminal to flasher connector
39 c	brown	16	Rear directional light connector to left rear directional light connection
40	orange	18	Stop light switch to light switch "STOP" terminal
93	yellow	18	Directional signal connector to flasher connector
121	purple	18	Directional signal connector to rear directional light connector
121 a	lt green	16	Rear directional light connector to right rear directional light connection
122	white	16	Right headlight high beam jumper wire
122	white	16	Left headlight high beam jumper wire
150	black	16	Right headlight ground wire
150	black	16	Left headlight ground wire
151	black	16	Right headlight ground wire
151	black	16	Left headlight ground wire
155	lt green	16	Right headlight connector to right headlight (high beam)
155	lt green	16	Left headlight connector to left headlight (high beam)
158	tan	16	Right headlight connector to right headlight (low beam)
158	tan	16	Left headlight connector to left headlight (low beam)