Tan — Horn connection
Light blue — LF directional light
Dark blue — RF directional light
Yellow — Turn signal flasher
Pink — LR directional light
Purple — RR directional light
White — Stop light
Orange — Hazard Flasher

Horn connection
LF directional light
RF directional light
Hazard flasher
Turn signal flasher
LR directional light
RR directional light
Stop light

D E F G H J K L M N P

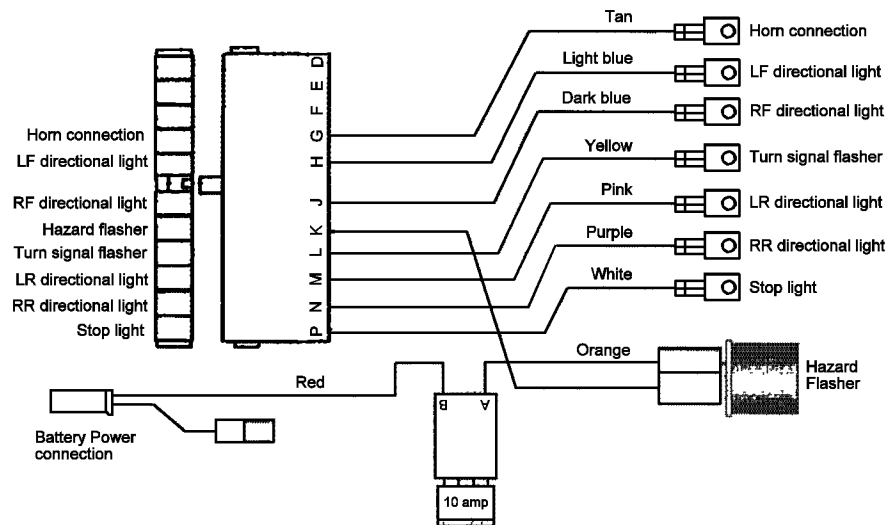Red
Battery Power connection
B A
10 amp

1. Plug the harness into the mating connector at the base of the steering column.
2. Connect the light blue, dark blue, yellow, pink, purple, and white wires at the opposite end of the harness to the factory under dash harness by matching the wire colors in the appropriate connectors of the under dash harness.
3. Connect the tan wire to the horn button lead.
4. Plug the red wire to a battery power source on the fuse panel. An auxillary battery source at the back of the cigarette lighter may also be used by first removing the existing heavy red wire and plugging it into the red pigtail wire.
5. Install a heavy duty 2 prong flasher into the "V" shaped plastic connector to enable use of the 4-way flashers.
6. Install a 10 amp fuse into the in-line fuse holder.

M&H Electric Fabricators, Inc.
AUTOMOTIVE WIRING SYSTEMS
Phone (562) 926-9552   Fax (562) 926-9572

TITLE
INSTRUCTION SHEET
STEERING COLUMN
ADAPTER HARNESS

DWG NO.
92963628