

Hazard Flasher


1963 CHEVY CORVETTE
 1962 CHEVY NOVA
 1959-62 CHEVY PASSENGER
 1960-62 CHEVY TRUCK (W/DIRECTIONALS ONLY)
 TO
 1969-74 STEERING COLUMN

Note: Color sequences in the steering column connector will most often match the wire colors in the original dash harness. In those cases where they do not, it is not necessary to change any wires in the steering column connector. The horn wire connection wire color differs by year and can be either tan or dark green in the original dash harness.

M&H Electric Fabricators, Inc.
AUTOMOTIVE WIRING SYSTEMS
 Phone (562) 926-9552 Fax (562) 926-9572

TITLE
 INSTRUCTION SHEET
 STEERING COLUMN ADAPTER HARNESS

DWG NO.
92964251

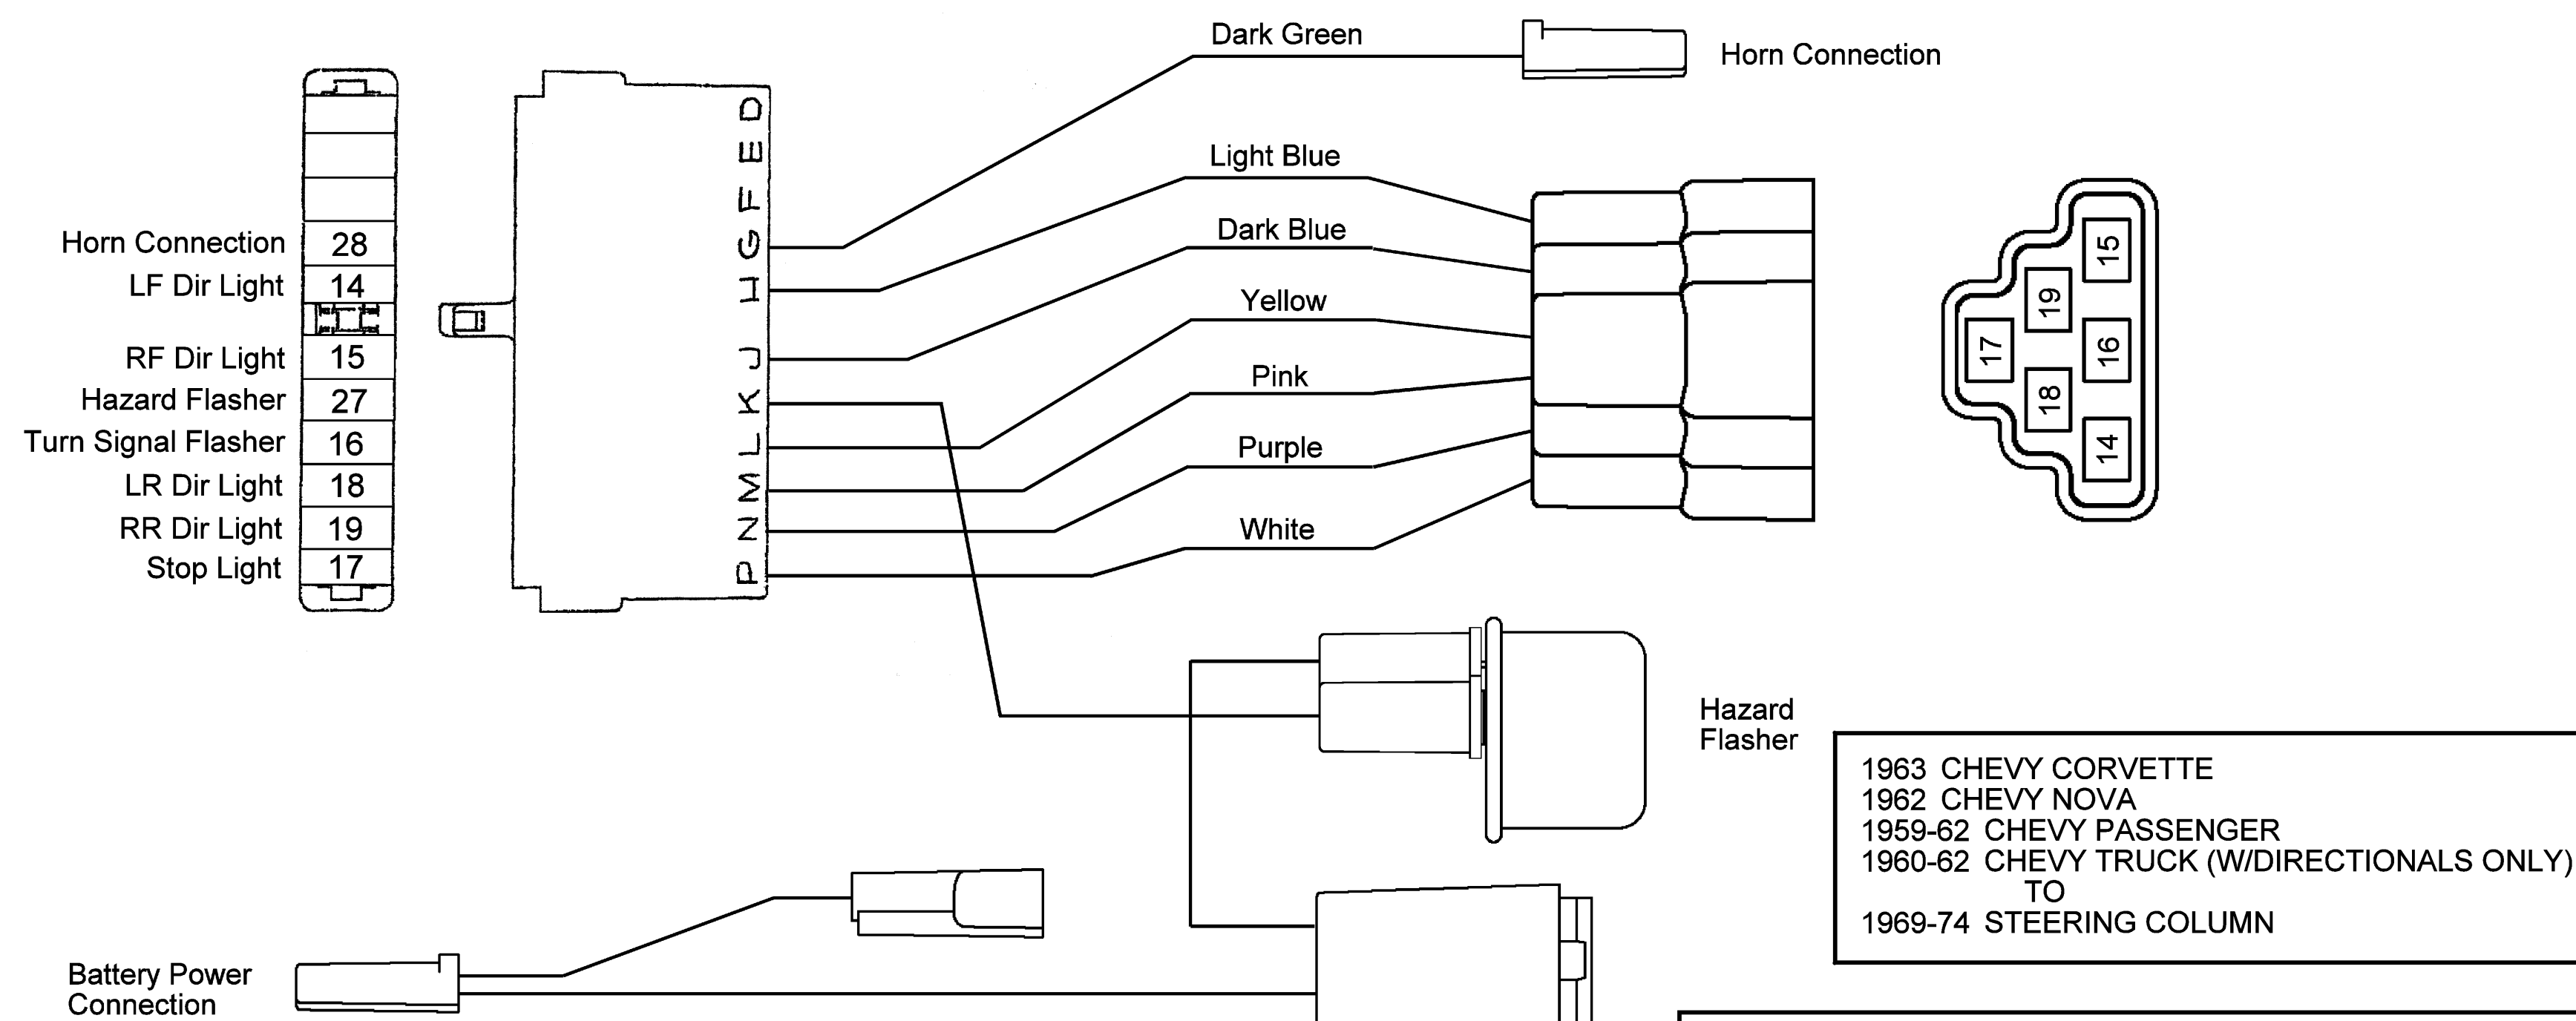

Hazard Flasher

1963 CHEVY CORVETTE
 1962 CHEVY NOVA
 1959-62 CHEVY PASSENGER
 1960-62 CHEVY TRUCK (W/DIRECTIONALS ONLY)
 TO
 1969-74 STEERING COLUMN

Note: Color sequences in the steering column connector will most often match the wire colors in the original dash harness. In those cases where they do not, it is not necessary to change any wires in the steering column connector. The horn wire connection wire color differs by year and can be either tan or dark green in the original dash harness.

M&H Electric Fabricators, Inc.
AUTOMOTIVE WIRING SYSTEMS
 Phone (562) 926-9552 Fax (562) 926-9572

TITLE
 INSTRUCTION SHEET
 STEERING COLUMN ADAPTER HARNESS

DWG NO.
92964251