


**Note:** Plug the harness into the mating connector at the base of the steering column. Plug the other end of the harness into the mating connector on your dash harness.

**M&H Electric Fabricators, Inc.**  
 AUTOMOTIVE WIRING SYSTEMS  
 Phone (582) 928-9552 Fax (582) 928-9572

TITLE INSTRUCTION SHEET  
 STEERING COLUMN ADAPTER  
 1967-72 CHEVY TRUCK  
 TO  
 1975-UP STEERING COLUMN

DWG NO. **92964900**

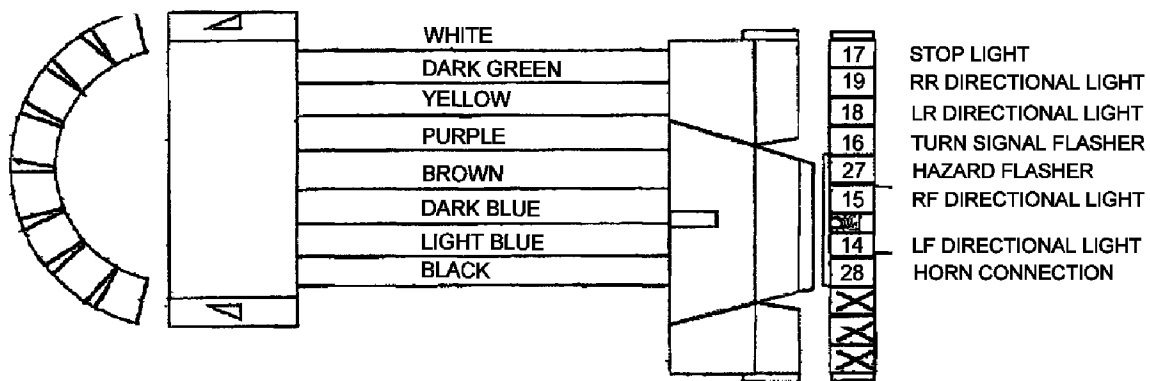

**Note:** Plug the harness into the mating connector at the base of the steering column. Plug the other end of the harness into the mating connector on your dash harness.

**M&H Electric Fabricators, Inc.**  
 AUTOMOTIVE WIRING SYSTEMS  
 Phone (582) 928-9552 Fax (582) 928-9572

TITLE INSTRUCTION SHEET  
 STEERING COLUMN ADAPTER  
 1967-72 CHEVY TRUCK  
 TO  
 1975-UP STEERING COLUMN

DWG NO. **92964900**