
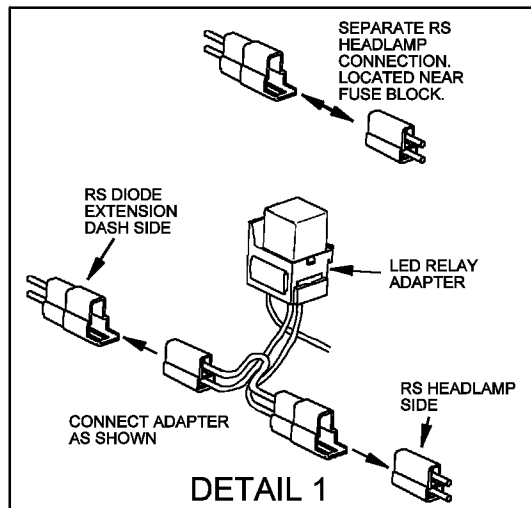
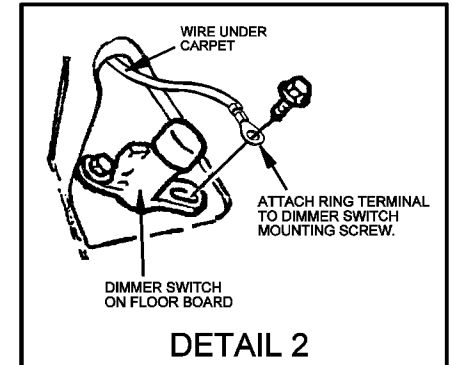


LED HEADLAMP DOOR ADAPTER RELAY INSTRUCTIONS

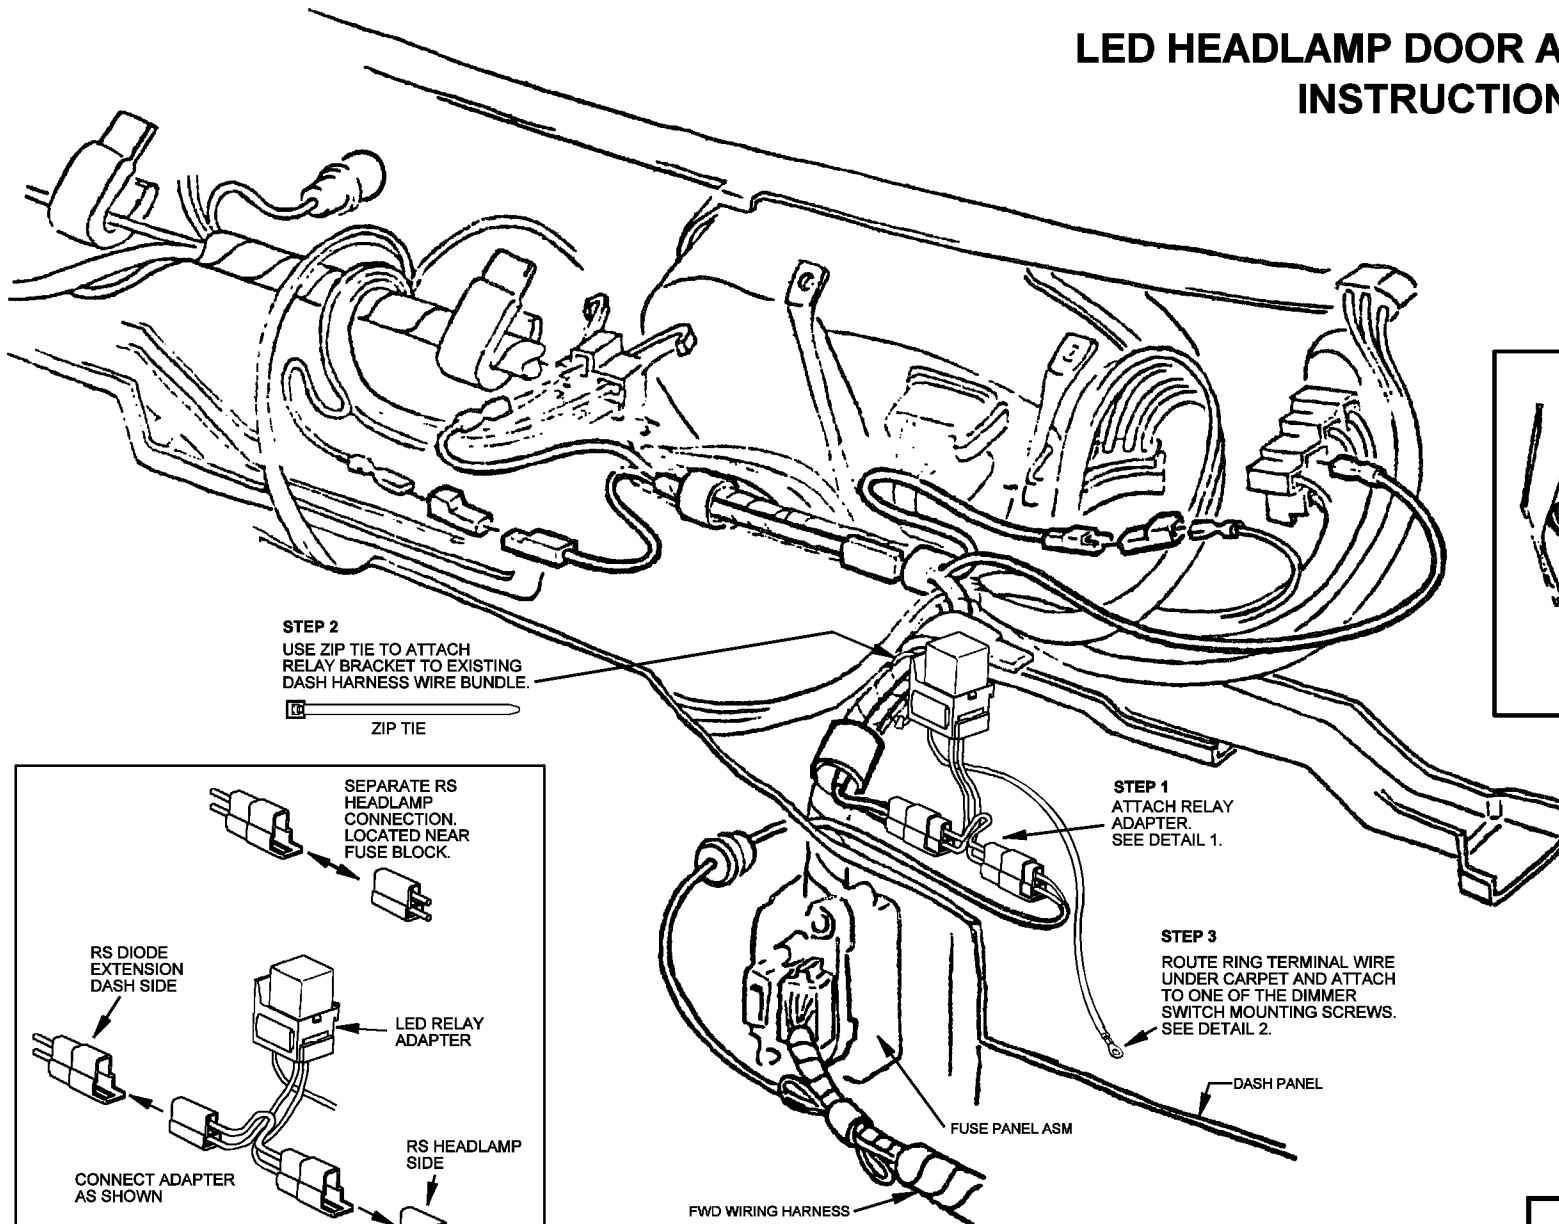

STEP 1

SEPARATE RS HEADLAMP CONNECTION AND RECONNECT TO THE RELAY ADAPTER. SEE DETAIL 1.

STEP 2

USE ZIP TIE TO ATTACH RELAY BRACKET TO EXISTING DASH HARNESS WIRE BUNDLE.

STEP 3

ROUTE RING TERMINAL WIRE UNDER CARPET AND ATTACH TO DIMMER SWITCH. SEE DETAIL 2.

M&H Electric Fabricators, Inc.
AUTOMOTIVE WIRING SYSTEMS
Phone (562) 926-9552 Fax (562) 926-9572

TITLE INSTRUCTION SHEET
LED HEADLAMP DOOR ADAPTER RELAY
1967 CAMARO

DWG NO. **92975477**